

# MP

## 1501 SD

cuffia sport MP3 player  
sport headset MP3 player



Le informazioni contenute in questo documento sono soggette a variazioni senza preavviso.

Il presente documento non può essere riprodotto o trasferito, neppure parzialmente, in alcun modo e con nessun mezzo, elettronico o meccanico, né tanto meno fotocopiato, copiato o tradotto verso altre lingue per nessun scopo senza esplicito consenso da parte del costruttore.

I nomi, i disegni e i marchi registrati presenti in questo manuale sono proprietà dei rispettivi proprietari.

Leggere attentamente il presente libretto di istruzioni e seguire attentamente le informazioni riportate prima di utilizzare il prodotto.



**Attenzione! L'uso inappropriato della batteria può causare esplosioni o surriscaldamenti della stessa.**

## **AVVERTENZA PER IL CORRETTO UTILIZZO DELLA BATTERIA RICARICABILE**

- Ricaricare la batteria ad una temperatura compresa tra i 5°C e i 35°C.
- Quando la ricarica è completa viene segnalata con un messaggio (controllare il manuale d'uso).
- Non prolungare la ricarica oltre i tempi indicati per evitare il rischio di surriscaldamento e scoppio.
- Non ricaricare la batteria per un tempo superiore alle 6 ore.
- La ricarica della batteria oltre i tempi indicati o un prolungato periodo di inattività possono ridurre la durata.
- La batteria ricaricabile è soggetta ad usura e la sua capacità diminuisce gradualmente.
- Per prolungare la durata della batteria, utilizzarla quando è completamente carica fino al completo scaricamento, quindi ricaricarla completamente di nuovo prima di utilizzarla nuovamente. Mettendo in carica una batteria non completamente esaurita, la sua durata risulterà ridotta. In questo caso, ripetere il ciclo caricamento/scaricamento completo più volte.
- Evitare di tenere la batteria sottocarica tutta la notte.

### DESCRIZIONE COMANDI

1. Microfono
2. Ingresso Micro SD-Card
3. Tasto < PREV
4. Tasto V
5. Tasto >|| PLAY/PAUSA
6. Tasto M
7. Tasto > NEXT
8. Slitta fuoriuscita presa USB
9. Interruttore accensione ON/OFF
10. Presa cuffia
11. Foro per cordellino
12. Presa USB

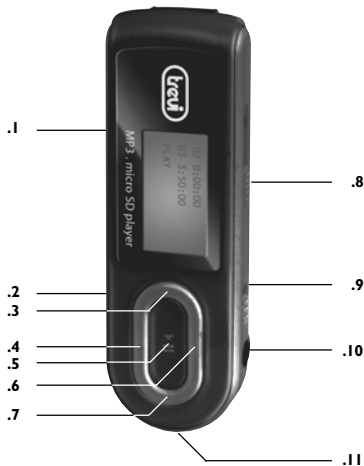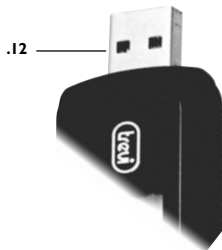

## CARICAMENTO DELLA BATTERIA

L'MP 1501SD ha al suo interno una batteria ricaricabile al Lithio.

- 1) Portare l'interruttore ON/OFF (9) su ON.
- 2) Collegare il lettore ad un computer dotato di presa USB. Il simbolo della batteria sul display mostrerà la carica in corso.
- 3) Al termine della ricarica il simbolo della batteria sul display mostrerà batteria piena.

**NB: - La durata della ricarica non deve superare le 2 ore.**

**- La durata della batteria completamente carica si aggira intorno alle 5 ore di riproduzione continua.**

## INSERIMENTO DELLA MICRO SD

- 1) Inserire la scheda Micro SD in dotazione tenendo la superficie con il lato scritto rivolto verso il basso e inserirla delicatamente nell'apposito slot fino a sentire un click. A questo punto il lettore è in grado di riprodurre i brani MP3 nella scheda.
- 2) Rimuovere la scheda Micro SD premendo contro essa.

## TRASFERIMENTO FILE AUDIO MP3/WMA DA PC NELLA MEMORIA MICRO SD

- 1) Collegare il lettore ad un computer dotato di presa USB.
- 2) La memoria della Micro SD verrà riconosciuta automaticamente dal computer.
- 3) Copiare i file audio MP3/WMA dal computer alla Micro SD.

**Nota: Per la rimozione della memoria della Micro SD utilizzare la "Rimozione sicura dell'hardware".**

## **ACCENSIONE/SPEGNIMENTO**

- 1) Portare l'interruttore ON/OFF (9) su ON. Il lettore si accenderà automaticamente.
- 2) Premere il tasto >II PLAY/PAUSA (5) per 2 secondi per mettere in stand-by il lettore.
- 3) Premere nuovamente il tasto >II PLAY/PAUSA (5) per 2 secondi per riaccendere il lettore.
- 4) Portare l'interruttore ON/OFF (9) su OFF per spegnere il lettore e preservare la carica della batteria.

## **MODALITA' MUSICA**

- 1) Accendere l'MP 1501SD e portarsi su modalità MUSICA tramite i tasti < PREV (3) o > NEXT (7).
- 2) Premere il tasto M (6) per accedere alla modalità MUSICA.
- 3) Premere il tasto >II PLAY/PAUSA (5) per avviare la riproduzione.
- 4) Premere il tasto >II PLAY/PAUSA (5) per arrestare momentaneamente la riproduzione.
- 5) Premere nuovamente il tasto >II PLAY/PAUSA (5) per tornare alla normale riproduzione.
- 6) Premere il tasto < PREV (3) per selezionare il brano precedente.
- 7) Premere il tasto > NEXT (7) per selezionare il brano successivo.
- 8) Premere il tasto V (4) per modificare il volume. Premere il tasto < PREV (3) per diminuirlo o il tasto > NEXT (7) per aumentarlo.

## MENU' MODALITA' MUSICA

A riproduzione ferma premere il tasto M (6).

**Micro SD:** selezionare la cartella o il brano desiderato tramite i tasti < PREV (3) o > NEXT (7) e confermare con tasto M (6).

**Elimina file:** elimina il file selezionato.

**Elimina tutto:** elimina tutti i file.

**Uscita:** uscita dal menù e ritorno alla lista dei brani.

A riproduzione avviata premere il tasto M (6).

**Mod. Riproduzione:** selezionare la modalità di riproduzione. E' possibile selezionare fra sette modalità di ripetizione: Normale, Ripetizione Singola (ripetizione singolo brano), Cartella, Ripetizione Cartella, Ripeti tutto (ripetizione di tutti i brani), Casuale, Anteprema (riproduzione dei primi 10 secondi di ogni brano).

**Equalizzatore:** selezionare l'equalizzazione dell'audio. E' possibile selezionare fra sette modalità di equalizzazione: Normale, Rock, Pop, Classica, Soft, Jazz, DBB.

**Ripetizione A-B:** Questa funzione è utile se volete ripetere all'infinito particolari di un brano.

Una volta selezionata la funzione di ripetizione A-B, sul display in alto a sinistra la lettera A dell'icona A-B inizia a lampeggiare, indicando che è attiva la funzione.

Premere il tasto > NEXT (7) per avviare la memorizzazione. Sul display in alto a sinistra la lettera B dell'icona A-B inizia a lampeggiare.

Premere il tasto > NEXT (7) per terminare la memorizzazione. A questo punto il lettore riprodurrà continuamente l'intervallo del brano memorizzato.

Premere il tasto M (6) per tornare alla normale riproduzione.

**Lirica:** visualizza il testo del brano (se presente).

**Uscita:** uscita dal menù e ritorno alla riproduzione.

## MODALITA' REGISTRAZIONE

- 1) Accendere l'MP I50I SD e portarsi su modalità REGISTRAZIONE tramite i tasti < PREV (3) o > NEXT (7).
- 2) Premere il tasto M (6) per accedere alla modalità REGISTRAZIONE.
- 3) Premere il tasto >II PLAY/PAUSA (5) per avviare la registrazione.
- 4) Premere il tasto >II PLAY/PAUSA (5) per arrestare momentaneamente la registrazione.
- 5) Premere nuovamente il tasto >II PLAY/PAUSA (5) per tornare a registrare.
- 6) Tenere premuto il tasto M (6) per salvare la registrazione.
- 7) Le registrazioni effettuate sono riproducibili nella modalità MUSICA.

## MENU' MODALITA' REGISTRAZIONE

A registrazione ferma premere il tasto M (6).

**Tipo di registrazione:** selezionare la qualità della registrazione tramite i tasti < PREV (3) o > NEXT (7) e confermare con tasto M (6). E' possibile selezionare fra tre tipi di qualità: 32Kbit, 64Kbit e 192Kbit.

**Uscita:** uscita dal menù e ritorno alla lista dei brani.

## MENU' IMPOSTAZIONI

- 1) Accendere l'MP I50I SD e portarsi sul menù IMPOSTAZIONI tramite i tasti < PREV (3) o > NEXT (7).
- 2) Premere il tasto M (6) per accedere al menù IMPOSTAZIONI.

## DATA E ORA

Permette di regolare data e ora.

- 1) Regolare l'anno tramite i tasti < PREV (3) o > NEXT (7).
- 2) Passare alla regolazione del mese tramite il tasto V (4).
- 3) Ripetere il punto 1 per regolare mese, giorno, ora, minuti e secondi.
- 4) Premere il tasto M (6) per salvare le regolazioni e tornare al menu IMPOSTAZIONI.

**Nota: Spegnendo il lettore tramite l'interruttore ON/OFF (9), la regolazione di data e ora verrà persa.**

## SPEGNI DISPLAY

Permette di regolare la durata in secondi dell'illuminazione del display (00=sempre acceso).

## LINGUA

Permette di scegliere la lingua del menù.

## RISPARMIO ENERGIA - SPEGNIMENTO AUTOMATICO

Permette di regolare l'intervallo in minuti di inattività dopo il quale il lettore si spegne automaticamente (00=sempre acceso).

## CONTRASTO

Permette di regolare il contrasto del display.

## VERSIONE FIRMWARE

Visualizza la versione di firmware.

**SPECIFICHE TECNICHE**

|                                 |                                                   |
|---------------------------------|---------------------------------------------------|
| Sistema operativo .....         | Windows® 2000/XP/Vista/7 - Mac OS 10              |
| Versione USB .....              | 2.0 alta velocità                                 |
| Capacità .....                  | Micro SD Card fino a 8GB                          |
| Formati audio supportati .....  | MP3,WMA                                           |
| Potenza uscita auricolari ..... | 2x10mW                                            |
| Alimentazione .....             | Batteria al Lithio ricaricabile tramite presa USB |

**Avvertenze per il corretto smaltimento del prodotto.**

Il simbolo riportato sull'apparecchiatura indica che il rifiuto deve essere oggetto di "raccolta separata" pertanto il prodotto non deve essere smaltito insieme ai rifiuti urbani.

L'utente dovrà consegnare il prodotto presso gli appositi "centri di raccolta differenziata" predisposti dalle amministrazioni comunali, oppure consegnarlo al rivenditore contro acquisto di un nuovo prodotto.

La raccolta differenziata del rifiuto e le successive operazioni di trattamento, recupero e smaltimento favoriscono la produzione di apparecchiature con materiali riciclati e limitano gli effetti negativi sull'ambiente e sulla salute causati da una gestione impropria del rifiuto.

Lo smaltimento abusivo del prodotto comporta l'applicazione di sanzioni amministrative.

TREVI persegue una politica di continua ricerca e sviluppo, pertanto i prodotti possono presentare caratteristiche diverse da quelle descritte.

## INFORMATIVA SULLA RIMOZIONE E LO SMALTIMENTO DELLA BATTERIA

**Attenzione:** Questa operazione è riservata esclusivamente al personale tecnico specializzato!

### PROCEDURA PER LA RIMOZIONE DELLA BATTERIA

**Operare esclusivamente in assenza di collegamento dell'apparecchio alla rete elettrica!**

1. Rimuovere le viti indicate nella Fig.1 e rimuovere il mobile inferiore;
2. Individuare la batteria indicata dalla freccia nella Fig.2;
3. Scollegarla e rimuoverla.

Qualunque sia il tipo di batteria esaurita, essa non deve essere gettata tra i rifiuti domestici, nel fuoco o nell'acqua. Ogni tipo di batteria esaurita deve essere, riciclata oppure smaltita presso gli appositi centri raccolta dedicati.



Fig.1




Fig.2

The information contained in this document can be change without notice.

This publication can't be reproduced or transferred, even partially, in any way, electronic or mechanical, can't be photocopied, copied or translated to other languages for any purpose without the express consent of the manufacturer.

The names, designs and trademarks contained in this manual are property of their respective owners.

Please read carefully this user manual and follow information before the use the product.

**Attention! The inappropriate use of battery can cause explosions or overheating.**

**WARNING FOR A CORRECT USE OF RECHARGEABLE BATTERY**

- Recharge the battery in an ambient temperature between 5°C and 35°C.
- When the recharge is complete the device shows a message/signal (check the user's guide).
- Don't recharge more than the suitable period to prevent the risk of overheating and burst.
- Don't recharge the battery for more than 6 hours.
- Recharging the battery over the suitable period or an extended period of inactivity may reduce battery duration.
- Rechargeable battery is liable to wear and tear and its performance will reduce gradually.
- To extend the duration of the battery use it when is completely charged up to the complete discharging, then recharge it fully before use it again. Recharge a battery not completely consumed, will result a reduced duration. In this case, repeat the full charging/ discharging cycle many times.
- Avoid recharge the battery for the whole night.

### 1. Important Safety Instructions

The manual contains important safety instructions and information of the device's proper usage. Make sure to read carefully and understand all the instructions to avoid accidents.

- Please do not expose the device in the extreme temperature (above 40°C), especially in cars with window closed during summer.
- Please do not store it in the humid or dirty area.
- Please avoid the device falling and bumping strongly.
- Please do not turn up the volume of the earphones too high while using it. If you feel ringing in your ears stop using the device or turn the volume down.
- Please do not disassemble the device by yourself and do not wipe the surface of device with alcohol or benzene or thinners.
- Please do not use the device in areas where electronic devices are prohibited.
- It is not suggested to use the device when you are driving or walking in the street.

### 2. Function overview

- LCD Display
- Integrated Micro-SD card, support capacity up to 8GB
- Plays MP3, WMA music format file
- Built in Li-polymer battery
- Built in digital voice recording function
- Product Dimension: 83 x 28 x 12 MM

- 1: USB
- 2: USB Push the knob
- 3: Power ON/OFF
- 4: Earphone jack
- 5: Mode
- 6: Next
- 7: Volume
- 8: Play / Pause
- 9: Previous
- 10: Micro SD card slot
- 11: MIC
- 12: LCD Display
- 13: Strap hole

### 3. Basic Operation

Power on/Power Off:

Push the button to "ON" position to turn on the device.

Long press [\*\*](play/stop) button for 3 seconds to turn off the device, then push the Power ON/OFF button to " OFF" position.

Remarks: "ON /OFF" position is for you to power on/off completely the battery

Power off:

- In music mode: press [⏮] (play/stop) button for one second, the music will stop, long press [⏮] (play/stop) button for three seconds, the player will be turned off.
- In other modes: long press [⏮] (play/stop) button for three seconds, the player will be turned off.
- When battery power is low, system will automatically power off.

Adjusting volume:

Adjusting the volume in music mode, and voice mode, press [⏮] button will enter to volume adjustment interface. Pressing [⏮] button or [⏭] button will increase/decrease the volume one step. Long press [⏮] button or [⏭] button will increase/decrease continuously.

Notice: Do not turn up the volume too high when you put on the earphones, otherwise your hearing will be injured.

#### 4. About Battery

The player adopts a built-in Li-polymer battery with large capacity.

If battery power is low, the screen will display "low power" then will automatically power off.

Recharge your battery by connecting to PC via USB.

The screen displays battery icon and impulse when recharging battery. The icon will indicate full when completely recharged.

The battery will be full when charged continuously for 4 hours (the first two times will take 10hrs).

The running time of battery depends on high or low of volume, playing files format, button operation, etc.

The user can set [power off setting] to save power.

#### 5. Main menu

Press [⏮] button to enter into subsidiary menu: press [⏮] button or [⏭] button to select. Save setting: hold [⏮] button to save and exit from menu.

- ❖ Music mode: playing music (for more details, refers to "playing music")
- ❖ Record mode: recording voice (for more details, refers to "recording voice")
- ❖ System mode: edit system (for more details, refers to following "system setting")

#### 6. Music mode

- ❖ Play/Stop Play: In music mode, connect the earphone to the player, then press PLAY/STOP [⏮] button to play or stop.

- ❖ Select music: Pressing [ ] button briefly will move to the next songs. Pressing [ ] button briefly will move to the previous songs.
- ❖ Music mode menu: In music play mode, pressing [ ] button will enter sub-menu. press [ ] button or [ ] button to select the mode, then press [ ] button to confirm selection: Repeat, Equalizer , Replay, Exit
- ❖ Repeat mode: press [ ] button and [ ] button to select repeat mode. Normal; Repeat One; Folder; Repeat Folder; Repeat All; random; intro.
- ❖ Equalizer mode: JAZZ, CLASSIC, ROCK, POP, NORMAL,SOFT, DBB
- ❖ Tempo rate: press [ ] button and [ ] button to select tempo rate. Moving to positive direction will fast tempo rate and moving to negative direction will slow tempo rate. The digit "0" means normal tempo rate.
- ❖ Replay : A-B repeat, when "A" in the icon  blinks, swing [ ] to confirm start point, swing [ ] as "B" point . The player will replay from A to B according to the setting in the replay times.
- ❖ Lyric display: User can download lyrics from website and save them in the player with the same name of music.

Notice: The player displays lyric name as the same as the MP3 file name. For example, music file name is "song.mp3" and LRC file name must be "song.lrc", they should also be in the same folder.

## 7. Record mode

In player main menu, press [ ] button to confirm selecting record mode,

Press the front [ ] Button to start/stop recording. Press M button to save and exit.

Notice:

- 1) For fine recording, please record in quiet background.
- 2) Please do not talk before recording and start recording in 5~ 6 seconds.
- 3) Make sure battery power and memory are sufficient.
- 4) The player support 99 voice recording files storage in each directory. If the screen displays "out of space", which indicates the current directory has already saved 99 voice recording files, the user need to change to a new directory.
- 5) During recording, only front [ ] Button and [ ] button can be effective.

**8.System mode**


Press [ \* ] button or [ \* ] button to select [system], then press [ \* ] button briefly to edit.

|              |                                                                                                                                                                                                                                                                                                |
|--------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| System Time  | Press [ * ] to edit recording time. Swing [ * ] button and the digit of year will increase; swing [ * ] button to edit next digit, push [ * ] or [ * ] button to adjust the digit. Press [ * ] to confirm the setting.                                                                         |
| LCD set      | Always light<br>0 Sec<br>3 Sec<br>6 Sec<br>9 Sec<br>12 Sec<br>15 Sec<br>18 Sec<br>21 Sec<br>24 Sec<br>27 Sec<br>30 Sec                                                                                                                                                                         |
| Language     | English, Italian                                                                                                                                                                                                                                                                               |
| Power off    | Off time: set self-power off time when the player is stopped and no button is pressed. The time unit is seconds. 0 means set off the function.<br>Sleep time: set self-power off time after last key pressed, regardless of whether the player is active or stopped. The time unit is minutes. |
| Memory info. | Check the memory size and the remaining memory                                                                                                                                                                                                                                                 |

|                  |                                               |
|------------------|-----------------------------------------------|
| Firmware version | Display the player's firmware version         |
| Firmware upgrade | Firmware can be upgraded via connection to PC |
| Exit             | Exit from the sub-menu                        |

### 9. USB disk function

- 1) The player can be a large mobile storage device, supports 1GB/2GB/4GB/8GB memory
- 2) Above windows 98 no driver is required, plug and play to the computer
- 3) The player supports USB bus-powered and begins to charge when connecting to PC.
- 4) When connected to a computer, the screen will indicate three different modes while operating:

|                                                                                                      |                                                                                                       |
|------------------------------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------|
| suspending mode<br> | data downloading<br> |
| data uploading<br>  |                                                                                                       |

### 10. Encrypt disk function

User can use the software to set partitions for USB disk. One is normal disk, the other is encrypted disk. (User can see two disk icons in computer. WINDOWS 2K need install SP4, otherwise, user only see one disk icon and selecting [normal only] or [encrypt only] from [online mode] of [system setting]. Encrypted disk would hide all private data, others cannot access data without password.


Notice:

- 1) Data in encrypted disk cannot be readable in the player.
- 2) It is necessary for encrypted disk to input user name and password when connecting to computer.
- 3) Setting partitions will erase data, please backup data in advance . Combining disks would also erase data.
- 4) Please do not lose username and password. Otherwise, you cannot access encrypted disk. You can combine disks to cancel encrypted disk at risk of damaging data in encrypted one.

### 12. Upgrading

Use update tool installed in your computer to update and repair the damaged driver.

- 1) Connect player to the computer
- 2) Run the software: Start----program----MP3 Player Utilities ----- MP3 Player Upgrade Tool, click [choose new version firmware] button.

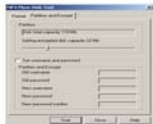

Find the icon of removable disk in [my computer]. Click the right button of mouse to select [format]. In formatting interface, select FAT system in [file system], then click [start] button to format disk. Notice: formatting disk would erase all the data and please backup data before formatting.

### 13. Troubleshooting

If the player couldn't play properly, please use trouble-shooting guide to help you.

| Symptom                                                           | Solution                                                                                                                                                                                                                                                                                                                                                                                                                        |
|-------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| The player cannot work                                            | <ol style="list-style-type: none"><li>1. Please check the voltage of battery</li><li>2. Make sure the power button is on</li><li>3. Please check if volume is set to "0" or not and make sure that earphones are connected properly.</li><li>4. Damaged music data will make noise in some extent; make sure there are files in the player.</li><li>5. choose right FAT file system in dialogue when formatting disk.</li></ol> |
| The player cannot upload/download files; no disk icon in computer | Please check USB cable is correctly connected.<br>Please properly re-install CD driver if under Win 98                                                                                                                                                                                                                                                                                                                          |
| The player cannot record                                          | Please check if memory is sufficient.<br>Please check the battery voltage.                                                                                                                                                                                                                                                                                                                                                      |
| Strange characters are displayed                                  | Please check if the correct language is selected.                                                                                                                                                                                                                                                                                                                                                                               |

If you encounter other difficulties with the device during warranty period, please feel free contact our company to help you solve the problem.

| Item                   | Specification                                                                |
|------------------------|------------------------------------------------------------------------------|
| Dual color LCD screen  | 128X64 pixel                                                                 |
| Operating language     | English, Italian                                                             |
| USB Interface          | USB2.0                                                                       |
| File formats supported | Music: MP1、MP2、MP3、WMA、WAV<br>Record : WAV                                   |
| The max output power   | (L) 10mW+(R) 10mW (320hm)                                                    |
| Micro SD memory        | 1GB~8GB                                                                      |
| Power                  | 3.7 V Li-polymer battery                                                     |
| Operating temperature  | -5℃~40℃                                                                      |
| Operating System       | WINSE/ME/2K/XP,Mac OS 10 、<br>Linux2.4.2<br>(Only WIN98 needs the CD driver) |
| Accessories            | User Manual, Earphone,                                                       |

#### 16. Support Micro-SD card function

Plug and pull Micro-SD Card:

Plug: Connect Micro-SD Card to the device by inserting the card at its observe side to the socket of device, thus the MP4 player can play the files in the Micro-SD Card.

Pull: Push Micro-SD Card, thus Micro-SD Card will rebound a little. Then it's available to take it out.



**Precautions for correct disposal of the product.**

The symbol shown on the equipment indicates that waste must be disposed of in "separate collection" and so the product must not be disposed of together with urban waste.

The user must take the product to special "separate waste collection centres" provided by local government, or deliver it to the retailer against the purchase of a new product.

Separate collection of waste and subsequent treatment, recycling and disposal operations promotes the production of equipment with recycled materials and limits negative effects on the environment and on health caused by improper handling of waste.

Illegal disposal of the product leads to the enforcement of administrative penalties.

**WARNING FORA CORRECT USE OF RECHARGEABLE BATTERY**

- Recharge the battery in an ambient temperature between 5°C and 35°C.
- Don't recharge more than the suitable period to prevent the risk of overheating and burst.
- Don't recharge the battery for more than 6 hours.
- Recharging the battery over the suitable period or an extended period of inactivity may reduce battery duration.
- Rechargeable battery is liable to wear and tear and its performance will reduce gradually.
- To extend the duration of the battery use it when is completely charged up to the complete discharging, then recharge it fully before use it again. Recharge a battery not completely consumed, will result a reduced duration. In this case, repeat the full charging/discharging cycle many times.
- Avoid recharge the battery for the whole night.

**INFORMATION NOTE ON THE REMOVAL AND DISPOSAL OF BATTERIES**

**Warning: Only high-qualified personnel should perform this operation!**

**BATTERY REMOVAL**

**The appliance should not be plugged to the mains socket when performing this operation!**

- 1) Remove the screws shown in Pic.1 and remove the lower part of the appliance;
- 2) Select the battery shown by the arrow in Pic.2;
- 3) Disconnect and remove the battery.

Used batteries should not be disposed of with household waste or thrown into fire or water. Used batteries should be recycled or disposed of in separate waste collection centres.



Pic.1



Pic.2







Trevi S.p.A. - Strada Consolare Rimini-San Marino, 62  
47924 Rimini (RN) - Italy  
[www.trevi.it](http://www.trevi.it) - [info@trevi.it](mailto:info@trevi.it)

MADE IN CHINA

